LARGAN™
Digital

chameleon Mega

1.3Megapixel

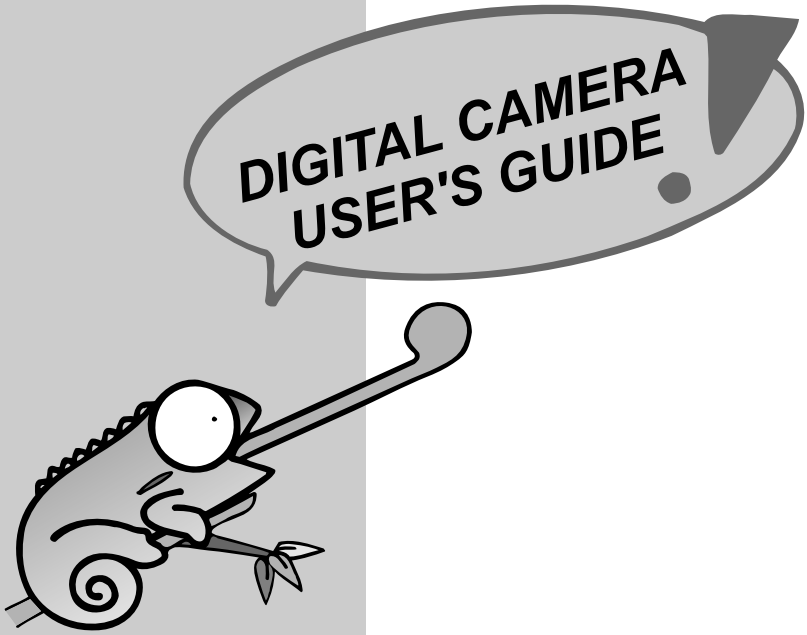

Welcome

Welcome to our LARGAN family. We strongly recommend that you read this user's guide before operating your chameleon Mega. You are on your way to experiencing a digital camera like no other. This easy-to-follow user's guide shows you how to use your new camera and software like a pro, whether you want to:

download photos to your computer,
preview and take the images in the television.
send photos to family and friends,
create cool invitations and greeting cards, and
create a mini movie using the live video feature.

Before you begin, check the contents to make sure that all of the components are included.

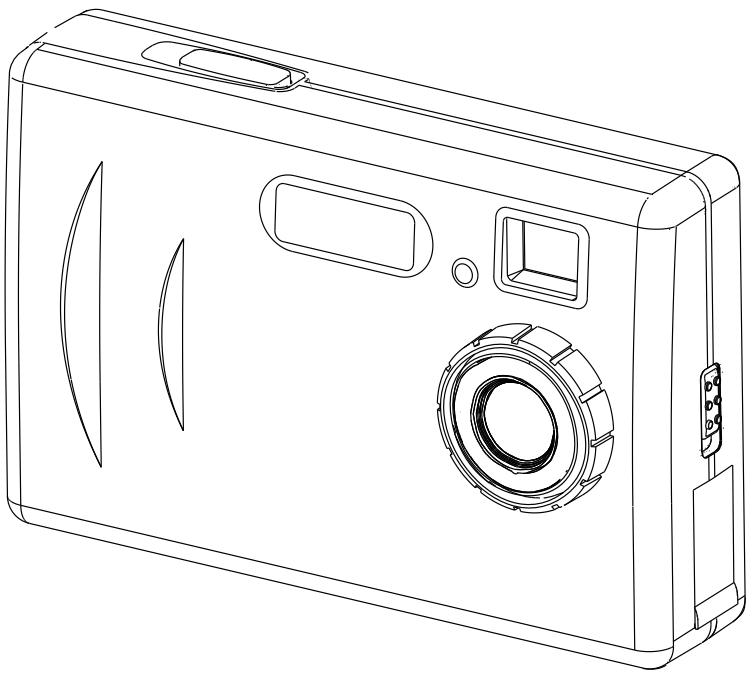

Contents

Welcome..... 1
chameleon Mega Kit..... 4
Meet the chameleon Mega..... 4
Features & Functions 5
Let's Get Started 7
Taking Pictures..... 8
LCD Control Panel..... 9

Accessing the CD..... 14
Installing the Software..... 14
Install chameleon Mega Suite..... 15

Getting Connected 19
Connecting the camera to the computer
Connecting the camera to the television

Fun Things You Can Do- (Digital)..... 21
Downloading Photos
To download an individual photo
Erasing Photos from chameleon Mega

Fun Things You Can Do- (Video)..... 23
Using the Video Recording Feature (Create AVI File)
Using the Video Capture Feature
Using the Video Conferencing Feature

Fun Things You Can Do- (TV).....27
Taking Photos in TV Mode
Using the Auto Preview Feature
Using the Preview Feature

Where to Get Help..... 30
Frequently Asked Questions 32
Additional Information 36
Warranty Card.....38

chameleon Mega kit

Your LARGAN chameleon Mega Kit includes:

1. chameleon Mega camera
2. AAA alkaline batteries (2)
3. Camera strap
4. Driving utility software CD
5. USB cable
6. Quick start guide
7. Leatherette camera case
8. User's guide
9. Tripod
10. TV cable

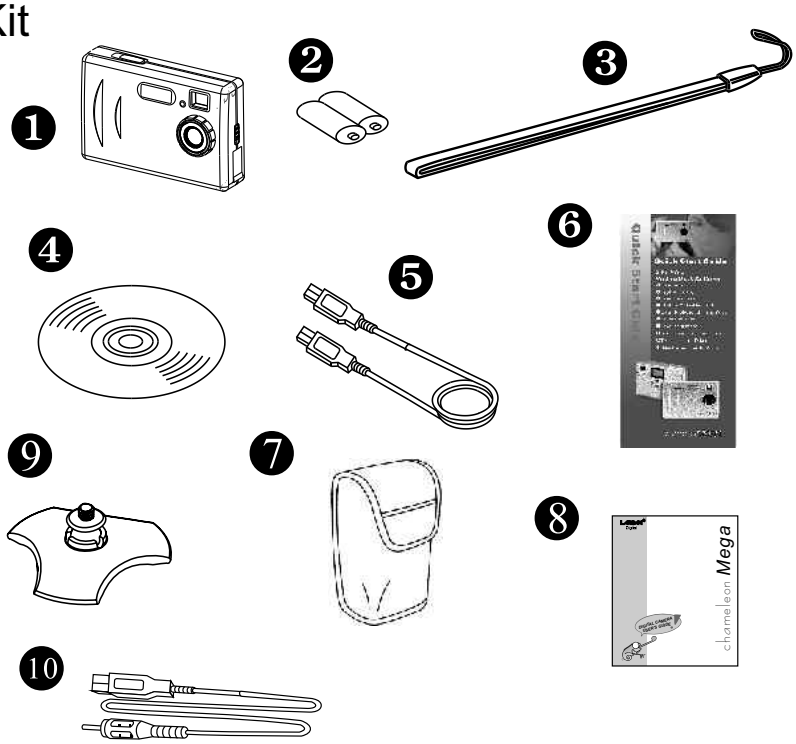

Meet the chameleon Mega

This is not your traditional camera. This is a "digital" camera. A digital camera allows you to take pictures without the use of film.

With the chameleon Mega, going digital is just the beginning. The chameleon Mega is a digital, PC, video and TV camera all wrapped up in a compact camera .

Before going into creating fun projects with the chameleon Mega, familiarize yourself with the cameras features and functions.

Features & Functions *Front of chameleon Mega*

Standard Mode
The standard mode is used when taking pictures from 1.2 m (4ft) ~infinity.

Macro Switch
This switch is used to change from Standard to Macro mode.

Macro Mode
The macro mode is used to take close up pictures of 0.2 m (8 inch).

USB Connector
The USB Connector is the port where you plug the USB cable or TV cable into.

Shutter
Press the Shutter button to take a picture.

Optical Finder
The optical finder or viewfinder is where you look into to compose the picture.

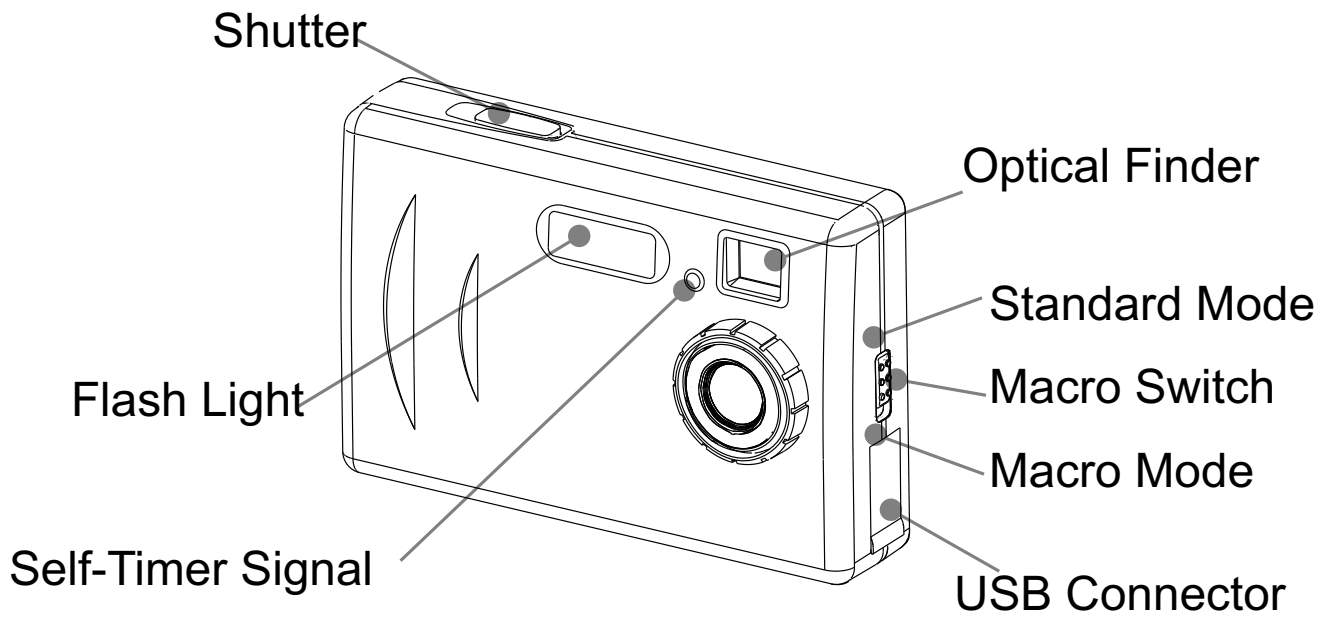

Features & Functions *Back of chameleon Mega*

Battery Cover
The battery cover secures the batteries in place.

Macro Mode Signal
The Macro Mode signal becomes lit when you switch from standard mode to macro mode.

Busy Signal
The Busy signal will blink if the camera is not ready to take a picture.

Flash Signal
The Flash signal will blink when the flash is in charging.

Menu Panel
The menu or control panel displays the various menu options.

/ Button
Press the button to
~ add extra light to the image
~ take a picture with a 10 seconds delay.

Mode / Power Button
Press the button to
~ switch between the camera's modes
~ turn the camera on and off

Select ▲ (select up) Button
Press the button to select the menu function.

Select ▼ (select down) Button
Press the button to select the menu function.

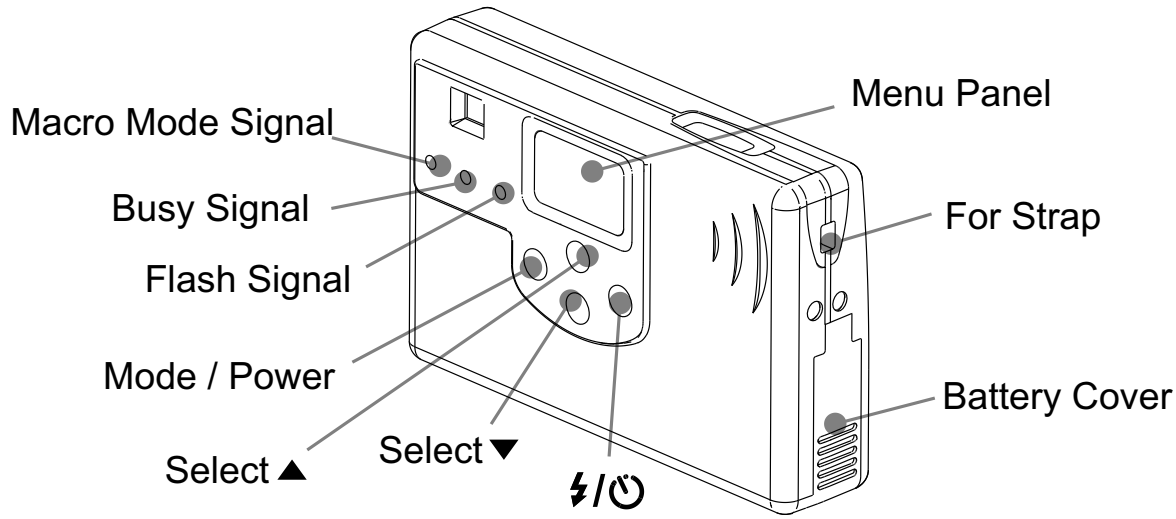

Let's Get Started

Attaching the camera strap

Attach the camera strap as shown in the illustration below.

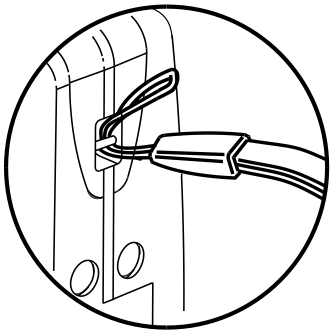

Figure1

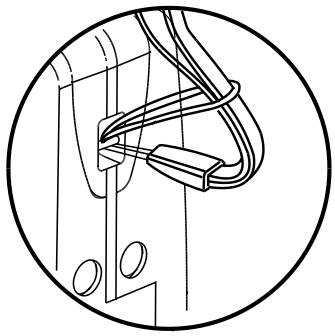

Figure 2

Inserting the Batteries

Step 1 Open the battery cover.
Step 2 Insert the batteries properly.
Step 3 Close and lock the battery cover.

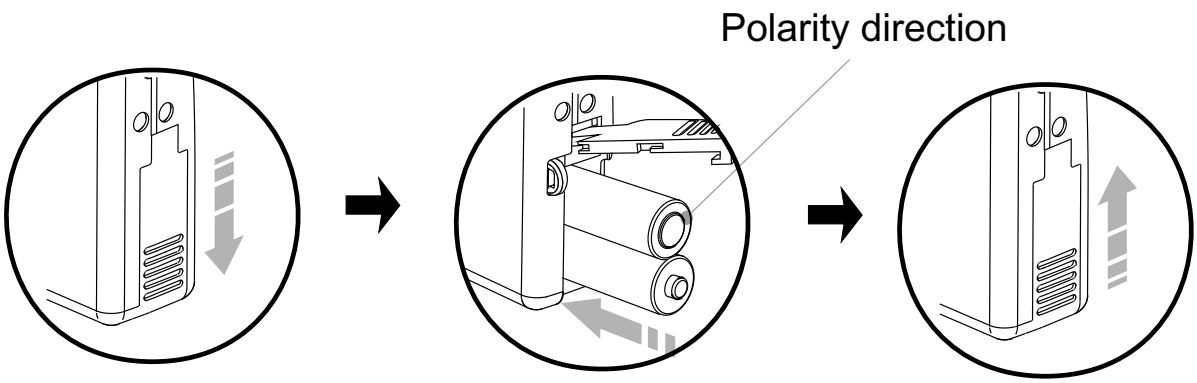

Precaution: Check the batteries for polarity. Remove the batteries if you are not going to use the camera. Do not short, disassemble or charge the batteries. Do not throw the batteries into a fire.

Taking Pictures

Now that the camera has batteries, let's take a few pictures to get started.

Step 1 Make sure the batteries are properly inserted into the camera.

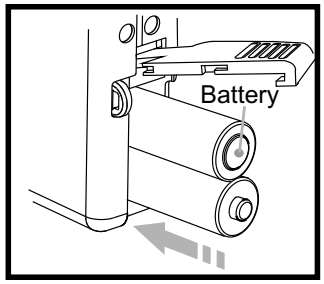

Step 2 Press the **Mode/Power** button. The camera will beep.

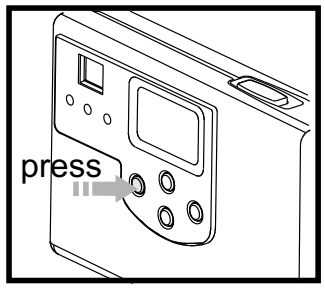

Step 3 Select **macro mode** or **standard mode**.

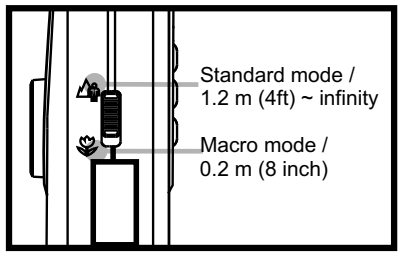

Step 4 Use the optical finder to compose the picture.

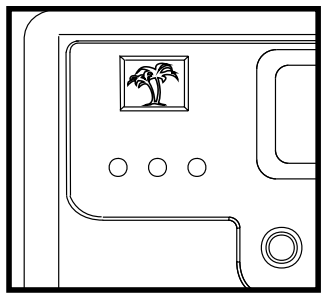

Step 5 Press **Shutter** button to take the picture. Wait for the beep to complete the picture.

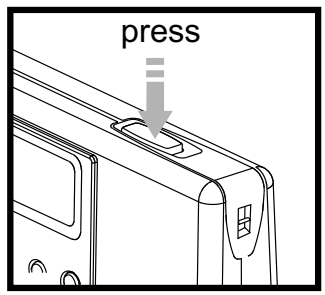

LCD Control Panel

Now that you are familiar with the basic steps to taking a picture, let's take a closer look at the menu or control panel.

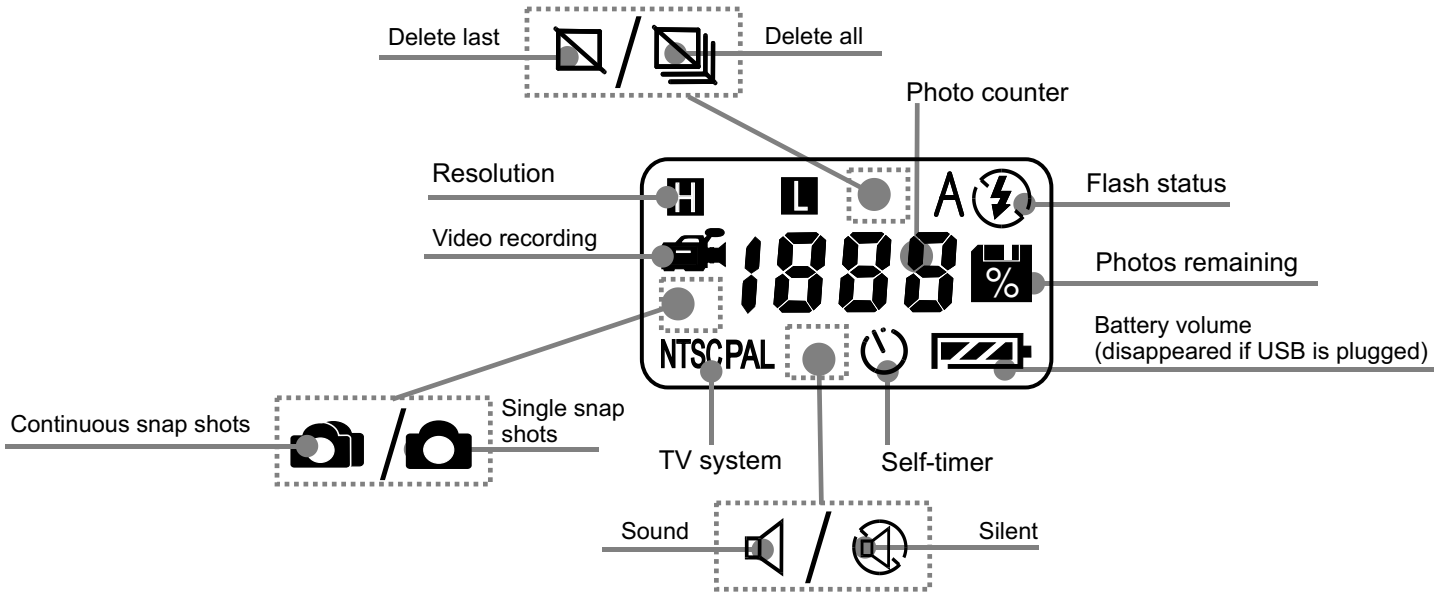

Mode 1: Flash - The Flash mode is used to add extra light to your image. You can select the following functions by pressing the ϟ/⏲ button.
Aϟ: Enable auto flashlight
ϟ: Turn off the flashlight

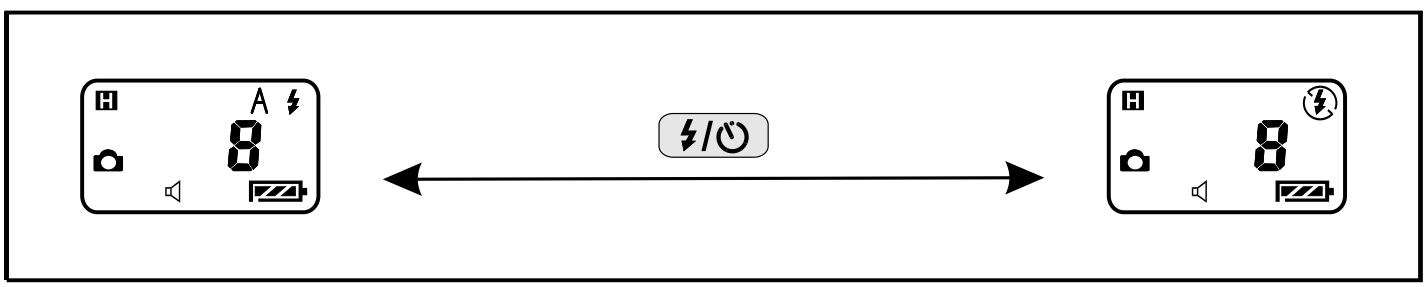

(In standard mode)

Mode 2: Self-Timer - The Self-Timer is used to take a picture with a 10 seconds delay. Press and hold the ϟ/⏲ button until the self-timer symbol ⏲ appears. Take the picture by pressing the **Shutter** button. You have 10 seconds which is indicated by the camera beeping and the self-timer indicator blinking on the front of the camera.

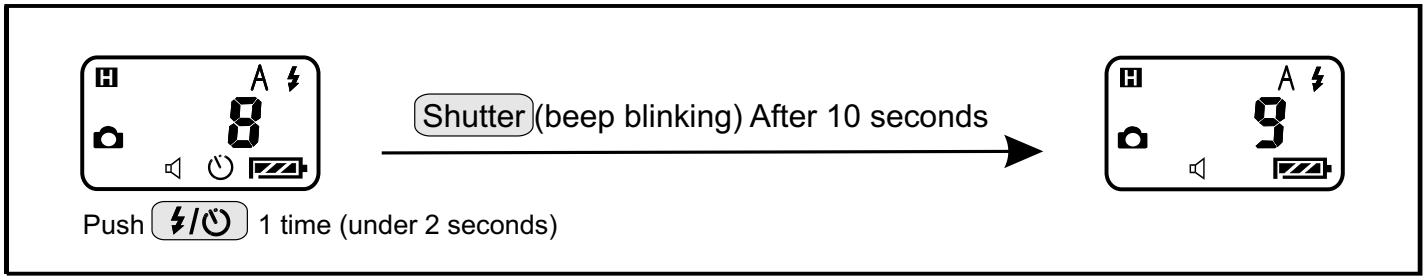

(In standard mode)

Mode 3: Continuous Snap Shots - The Continuous Snap Shots is used to continuously take up to 16 pictures (high resolution) at one time. Press the **Mode /Power** button until the 📷 is blinking. Press the **Shutter** button to take the pictures.

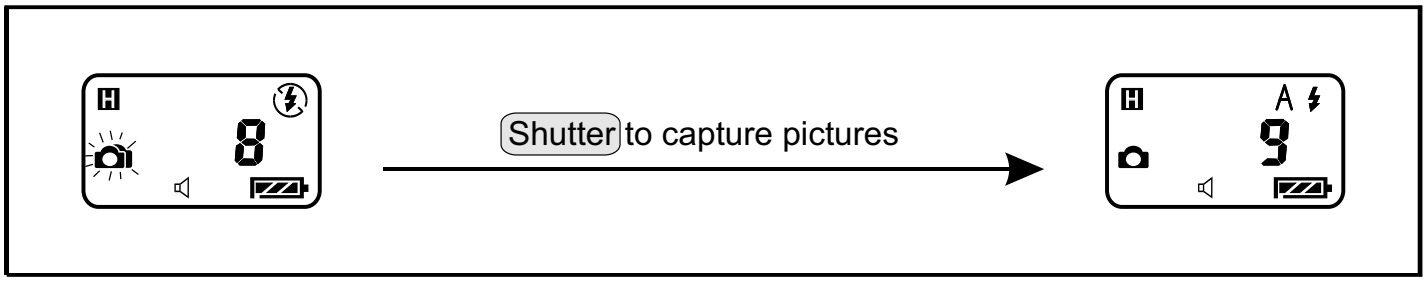

(In standard mode)

Mode 4: Video Recording - The Video Recording mode is used to create a video **AVI** file that you can email. First press the **Mode/Power** button until the is blinking . Then press the **Select** ▲ button until the appears. Press the **Shutter** button and using the optical finder to compose images. When you complete the video file, press the **shutter** button again.

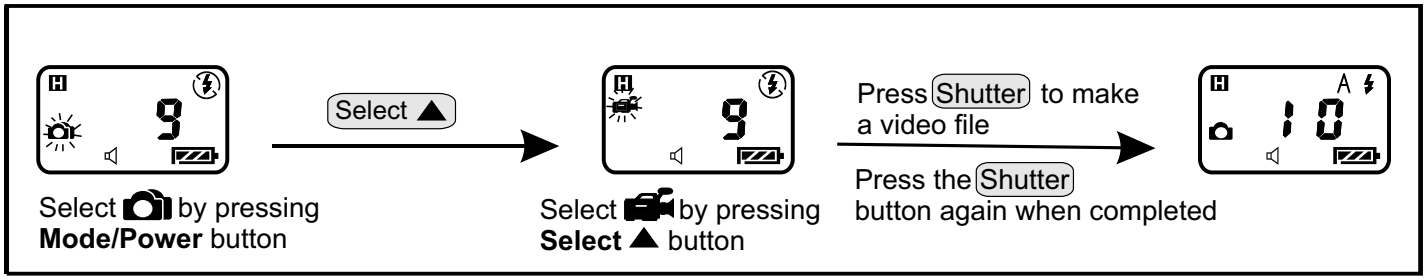
Select ▲
Press Shutter to make a video file
Press the Shutter button again when completed
Select by pressing Mode/Power button
Select by pressing Select ▲ button

(In standard mode)

Mode 5: Delete Last - The Delete Last mode is used to erase the last picture that you have taken with the camera. Press the **Mode/Power** button 4 times until the is appearing. Press the **Shutter** button to delete the last picture.

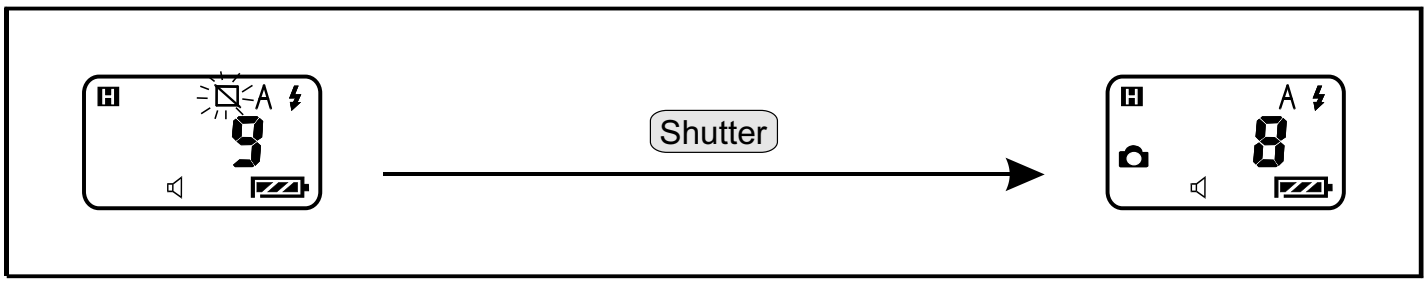

(In standard mode)

Mode 6: Delete All - The Delete All mode is used to erase all of the pictures from the chameleon Mega. Press the **Mode/Power** button 3 times until the is blinking. Press the **Shutter** for 3 seconds to delete all of the pictures.

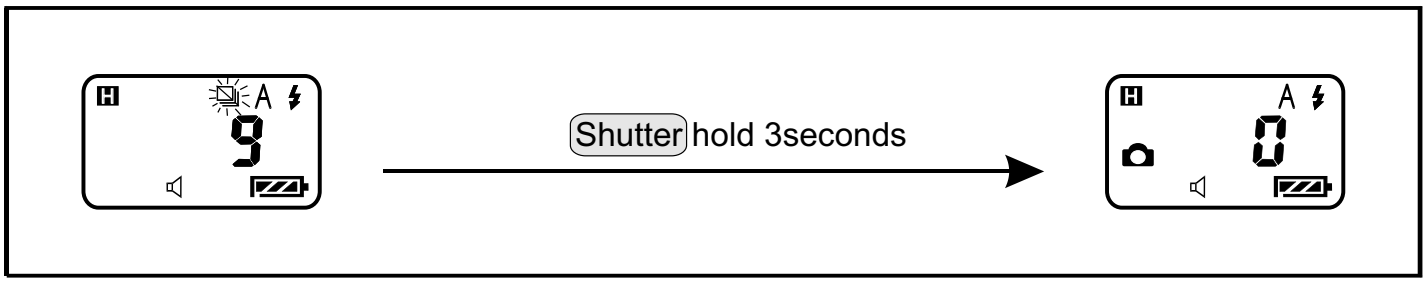

(In standard mode)

Mode 7: Resolution - The Resolution mode is used to change the image's quality. Press **Mode/ Power** button 2 times until H is blinking. Then press **Select** ▲ button to choose the resolution.

H :High resolution L :Low resolution

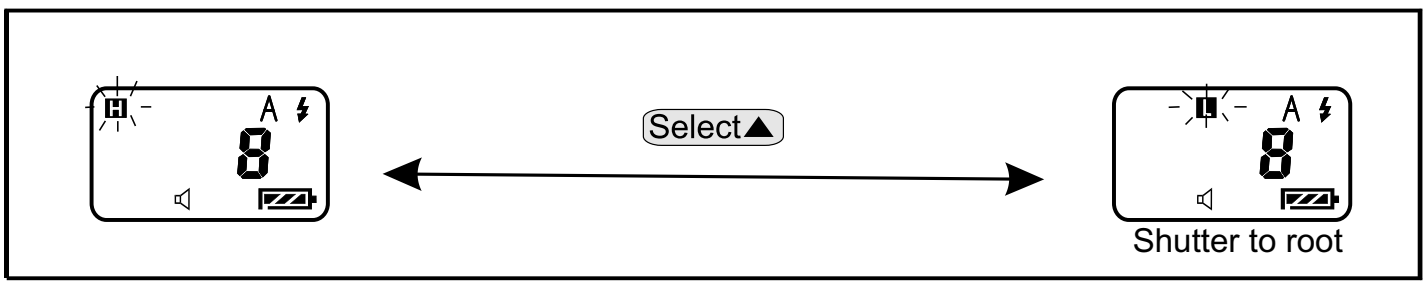

(In standard mode)

Mode 8: Photos Remaining - The Photos Remaining mode is used to show the percentage of pictures that are remaining. Press and hold on the **Select ▲** button to show the percentage. And release the **Select ▲** button to go back to the picture counter.

(In standard mode)

Accessing the CD

Step 1 Place the **LARGAN Digital** CD-ROM into the appropriate drive. The LARGAN Digital Main Menu screen should automatically appear.

Note: If the main menu screen doesn't appear, follow the directions below.

Step 1 Double-click on the **My Computer** icon on your desktop.

Step 2 Double-click on the **CD-ROM** icon.

Step 3 Double-click on the **Autorun** icon.

Step 4 The LARGAN Digital Main Menu screen will appear.

Installing the Software

Let's follow the order in which the software appears on the main menu to begin the install process. Please note that you **must** install all of the software options in order to download photos and take advantage of the chameleon Mega features.

Install chameleon Mega Suite

Step 1 Click on **Install chameleon Mega Suite** from the main menu.

Step 2 Click **Next** on the Welcome screen.

Note: You will now begin to install ArcSoft software.

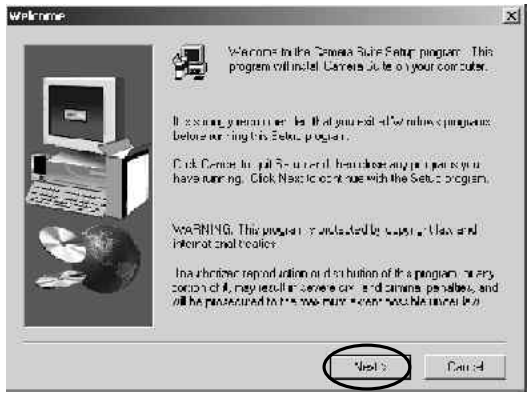

Step 3 After reading the software license agreement screen, click **Yes**.

Note: If you click **No**, **ArcSoft Camera Suite** will not be installed onto your computer.

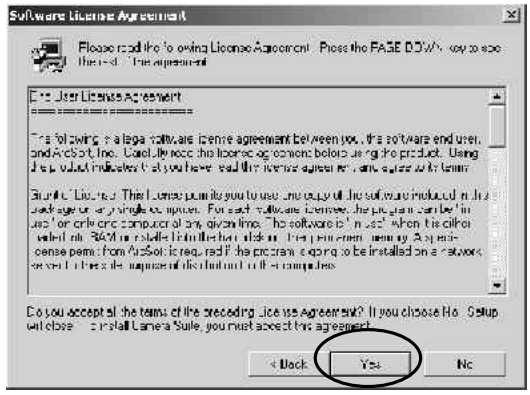

Step 4 Click **Next** on the Choose Destination Location screen.

Note: The Camera Suite files are being installed in the C:\ProgramFiles \ ArcSoft \ Camera Suite directory.

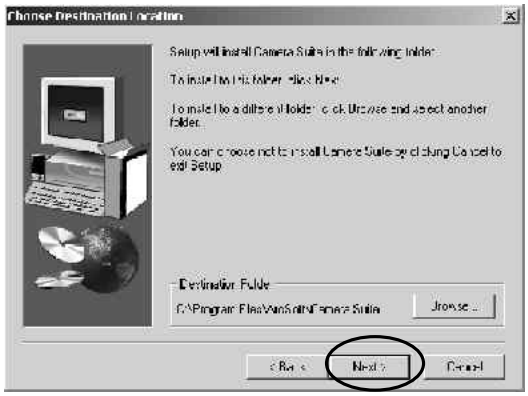

Step 5 Click **Next** on the Select Components screen.

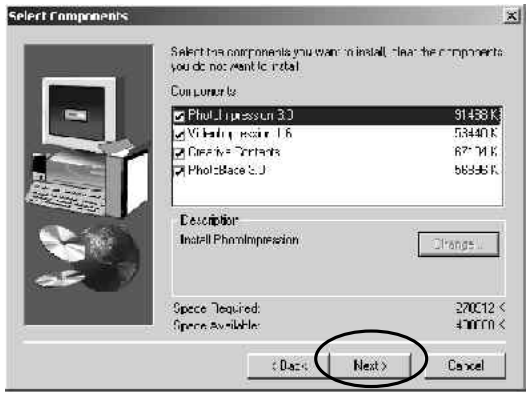

Step 6 Click **Next** on the Select Program Folder screen.

The files will begin to copy to your computer.

Step 7 Click **Finish** on the Setup Complete screen.

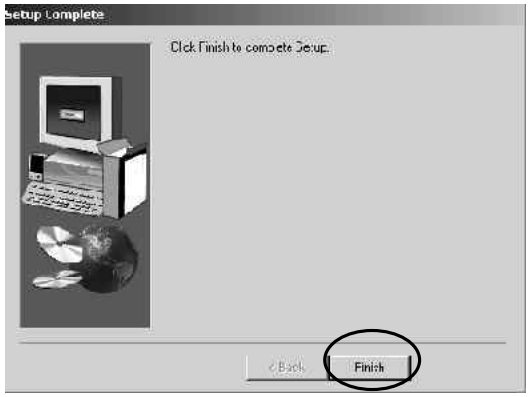

Note: The ArcSoft software installation is now complete. **Please continue to the next step:** Installing the chameleon Mega driver.

Step 8 Select the language to install the chameleon Mega driver.

Step 9 Click **Next** on the Welcome screen.

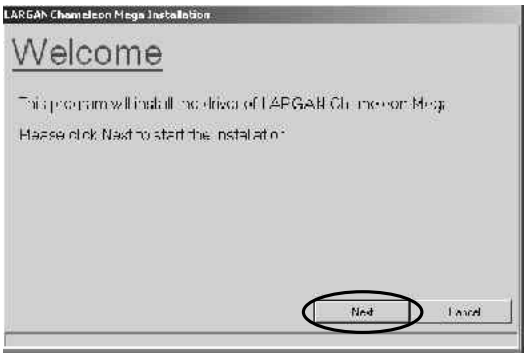

Step 10 Click **Finish** on the Installation Completed screen.

Note: In order for all of the software to take effect, your computer will automatically restart.

Note: Each software program group (PhotoImpression, VideoImpression, PhotoBase) contains a user's manual provided by the software manufacturer. This will provide in-depth information about each program than described in this user's guide. Please refer to ArcSoft tech support in **Where to get help** section. (See page 30)

Note: If you have **Windows XP** operating system on your PC, the following screen will appear upon installation of your software. Please click **Continue Anyway** on Hardware Installation screen to continue the installation.

Install chameleon Mega Video Camera

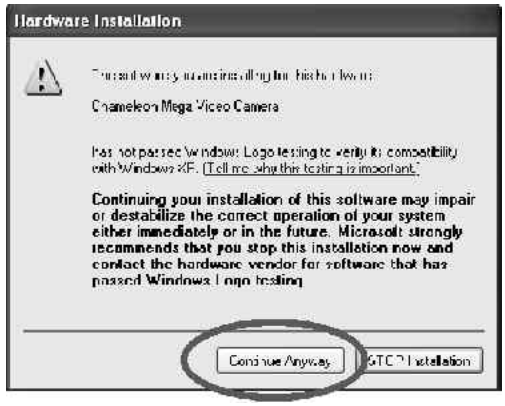
Hardware Installation
Chameleon Mega Video Camera
Continuing your installation of this software may impair
or destabilize the correct operation of your system
either immediately or in the future. Microsoft strongly
recommends that you stop this installation now and
contact the hardware vendor for software that has
passed Windows Logo testing.
Continue Anyway
STOP Installation

Install chameleon Mega Digital Camera

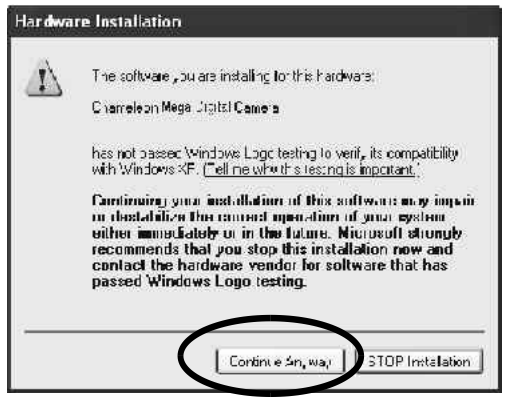
Hardware Installation
The software you are installing for this hardware:
Chameleon Mega Digital Camera
has not passed Windows Logo testing to verify its compatibility
with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair
or destabilize the correct operation of your system
either immediately or in the future. Microsoft strongly
recommends that you stop this installation now and
contact the hardware vendor for software that has
passed Windows Logo testing.
Continue Anyway
STOP Installation

Getting Connected

Connecting the camera to the computer

Step 1 Connect the **USB cable** to the **USB port** on your computer.

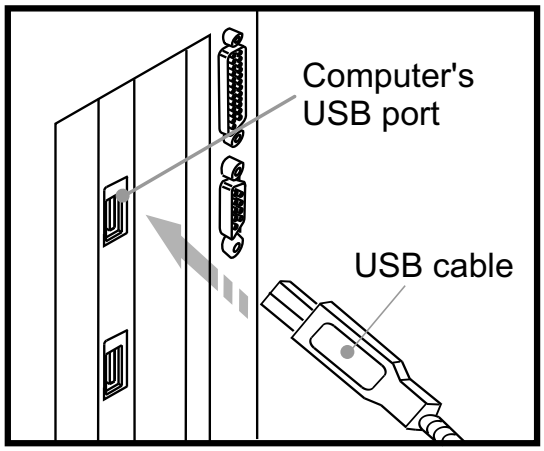

Step 2 Connect the other end of the **USB cable** to your camera **USB connector.**

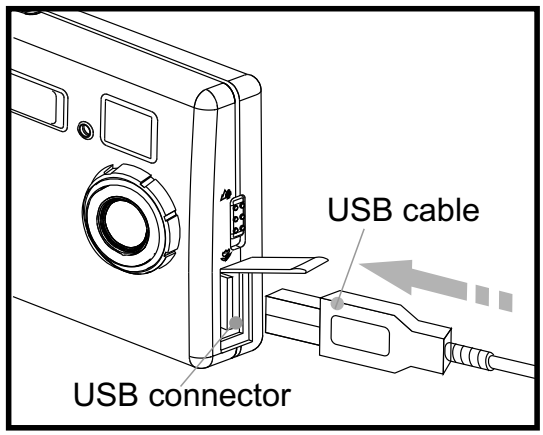

Connecting the camera to the television

Step 1 Connect the **TV cable** to the **USB connector** on your camera.

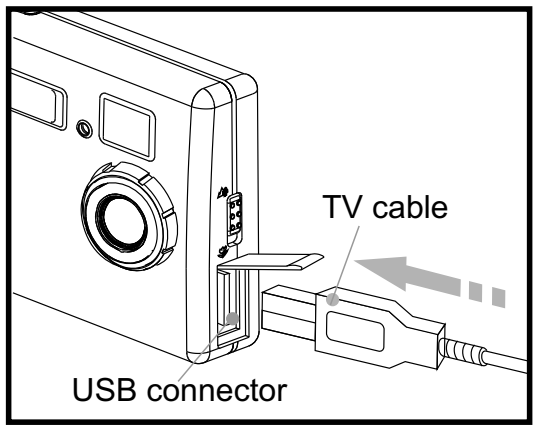

Step 2 Connect the other end of **TV cable** to the **Video in** port on the television.

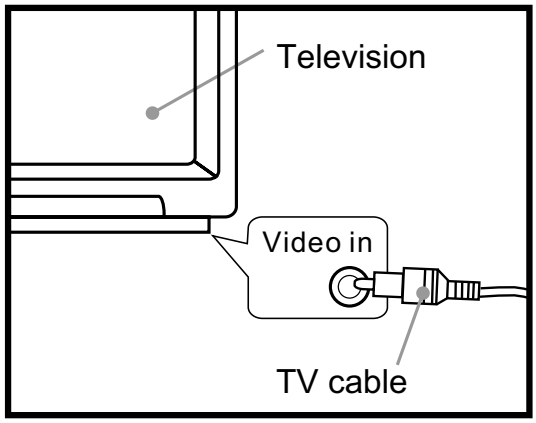

The LARGAN chameleon Mega Digital Camera has four operating modes: Digital, Video, PC and TV.

Digital = Take digital pictures with the chameleon Mega. No need for film. Download them to your computer.

Video = Create a mini video with the chameleon Mega's live video feature. When connected via the USB cable, you now have a video camera.

PC = The chameleon Mega camera can be used for video conferences.

TV = Take and preview the images stored in the camera from TV.

Fun Things You Can Do-(Digital)

Downloading Photos

Step 1 Connect the camera to your computer using the USB cable.

Note: Refer to the **"Getting Connected"** section on page 19 if you need assistance.

Step 2 Click on **Start** from the Windows Task Bar.

Step 3 Click on **Programs**.

Step 4 Click on **LARGAN Chameleon Mega** program group.

Step 5 Click on the **Chameleon Mega Digital Camera** icon.

Step 6 The LARGAN thumbnail viewer will appear.

It allows you to view photos that are stored in the chameleon Mega's memory. You are now ready to download your photos to your computer.

To download an individual photo

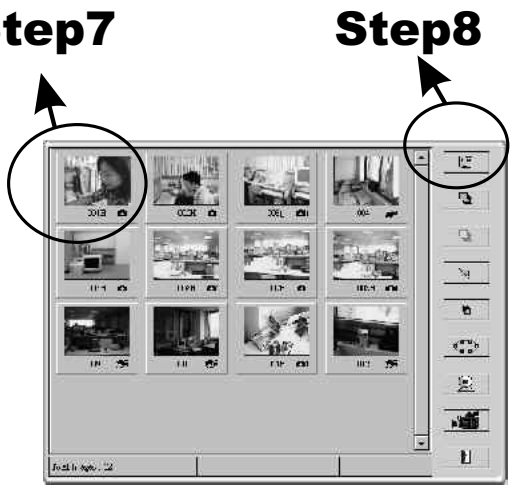

Step 7 Click on the desired photo. The photo number will turn red when selected.

Step 8 Click on the **Save** button located at the right of the thumbnail viewer.

Step 9 Type in the file name and click on **Save**.

Step 10 The photo has been stored in the computer.

Note: To download all of the photos, click on the **Select All** button. Next, click on the **Save** button. To download files in a non-consecutive order, just click on the desired photos, then click on the **Save** button.

Step 11 Click on the **Exit** button when you have finished downloading your photos.

Erasing Photos from chameleon Mega

Let's take a minute to erase the photos from the chameleon Mega. To erase all of the photos:

Step 1 Disconnect the camera from the USB cable.

Step 2 Press the **Mode/ Power** button 3 times until you see the icon appears in the menu panel.

Step 3 Press and hold the **Shutter** button down for 3 seconds. Notice how the menu panel displays zero (0) photos.

Step 4 Press and hold on the **Mode/Power** button to turn the camera off.

Note: When the camera is connected to the computer by the USB cable, you can click on the button located at the thumbnail viewer.

Fun Things You Can Do-(Video)

Using the Video Recording Feature (Create AVI File)

To use the video recording feature follow the steps below.

Step 1 Make sure the batteries are properly inserted into the camera.

Step 2 Press the **Mode/ Power** button. The camera will beep.

Step 3 Press the **Mode/ Power** button until you see the icon appears.

Step 4 Press the **Select** ▲ button until the appears.

Step 5 Press the **Shutter** button, using the optical finder to compose images.

Step 6 Press the **Shutter** button again when you complete a video file.

Note: If the video is under 16 MB, you can record several Video files.

Step 7 Connect the chameleon Mega to your computer via the USB cable.

Note: Refer to the "**Getting Connected**" section on Page 19 fo r assistance.

Step 8 Click on **Start** from the Windows Task Bar.

Step 9 Click on **Programs**.

Step 10 Click on the **LARGAN Chameleon Mega** program group.

Step 11 Click on the **Chameleon Mega Digital Camera** icon. Your photos will now appear .

Step 12 Click on the **Video Clip** icon.

Step 13 Select the **AVI**

The Video screen appears .

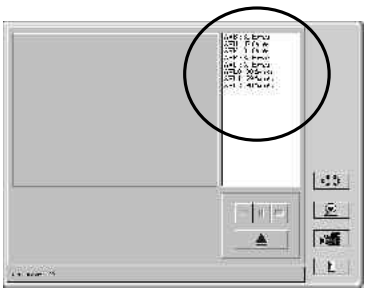

Step 14 Click on the **Run** icon

.

Note: You can change the Frame rate.

Step 15 Type in the file name and click on **Save**.

Step 16 The video file is being created.

Step 17 Click on the button.

Step 18 The AVI file is now complete, and you can email it to your friends and family.

Note: You can find this AVI file by pressing on the button
.

Using the Video Capture Feature

To use the video capture feature follow the steps below.

Step 1 Connect the chameleon Mega to your computer via the USB cable.

Note: Refer to the "**Getting Connected**" section on Page 19 for assistance.

Step 2 Click on **Start** from the Windows Task Bar.

Step 3 Click on **Programs**.

Step 4 Click on the **LARGAN Chameleon Mega** program group.

Step 5 Click on the **Chameleon Mega Digital Camera** icon.

Step 6 The LARGAN thumbnail viewer will appear.

Step 7 Click on **PC mode** icon. The PC Mode viewer will appear.

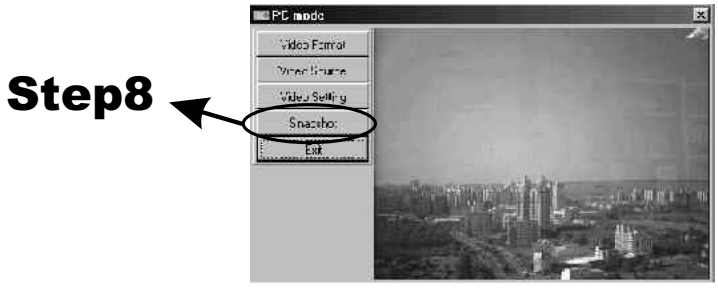

Step 8 Click on **Snapshot** to capture the photos .

Step 9 When you finish to capture the photos, click **Save All** icon on the image browser.

Step 10 Click on **OK** .

Step 11 Type in the file name and click on **Save**.

Step 12 The photos have been stored in the computer.

Using the Video Conferencing Feature

When using the chameleon Mega along with a video conferencing software such as MicroSoft NetMeeting, you can communicate with others over the Internet or local Intranet. Refer to the netmeeting / videoconference documentation located on the Largan website for more information.

Fun Things You Can Do-(TV)

Taking photos in TV Mode

To take photos in TV mode follow the steps below.

Step 1 Make sure the batteries are properly inserted into the camera.

Step 2 Press the **Mode/Power** button. The camera will beep.

Step 3 Connect the camera to your television via the TV cable.

Note: Refer to the "**Getting Connected**" section on Page 20 for assistance.

Step 4 Press the **Mode/Power** button 4 times until the icon" NTSC " appears in the menu.

Step 5 Compose the picture and press the **Shutter** button.

Note: In TV mode, you can press **Shutter** button 2 seconds to take up to 16 continuous snap shots (high resolution) at one time.

Using the Auto Preview Feature

To use the auto preview feature follow the steps below.

Step 1 Make sure the batteries are properly inserted into the camera.

Step 2 Press the **Mode/Power** button. The camera will beep.

Step 3 Connect the camera to your television via the TV cable.

Note: Refer to the "**Getting Connected**" section on Page 20 for assistance.

Step 4 Press the **Mode/Power** button 4 times until the icon" NTSC " appear in the menu.

Step 5 Press the **Mode/Power** button one time.

Step 6 The menu in the camera will displays (0) photos.

Step 7 Press **Select ▲** button 2 seconds to auto preview the images from the first one to the last via TV mode.

Note: You also can press **Select ▼** button 2 seconds to auto preview the images from the last one to the first via TV mode.

Step 8 Push any button to stop this function.

Using the Preview Feature

To use the preview feature follow the steps below.

Step 1 Make sure the batteries are properly inserted into the camera.

Step 2 Press the **Mode/Power** button. The camera will beep.

Step 3 Connect the camera to your television via the TV cable.

Step 4 Press the **Mode/Power** button 4 times until the icon" NTSC" appears in the menu.

Step 5 Press the **Mode/Power** button one time.

Step 6 The menu in the camera will displays (0) photos.

Step 7 Press **Select** ▲ button to preview the first image in the camera via TV mode.

Note: You can press **Select** ▲ or **Select** ▼ button to preview the next image in the camera via TV mode.

Step 8 Push any button to stop this function.

Note: In preview status, you can press **Shutter** button to preview the continuous photos or video repeatedly when TV monitor is appearing or . You can push any button to stop this function.

Step 9 At the same time, you can also delete the image, press the / button 2 times.

Where to Get Help

Help with your chameleon Mega camera is available from several resources:

Software Help

Help with any software packaged with this camera can be found under the help menu located on the menubar for each program, FAQs or by contacting the manufacturer of the software at:

Web: www.arcsoft.com
Tech Support: 510-440-9901 (Monday-Friday 8:30am-5:30pm PST)
Fax: 510-440-1270
Email: support@arcsoft.com
Mail: ArcSoft, Inc.
46601 Fremont Blvd.
Fremont, CA 94538
U.S.A.

Online Services

Contact Largan Digital at www.largan.com to access FAQs, the latest drivers and camera instructions. Customer service and toll free numbers are also available online.

Customer Support

If you have any questions about the camera, software or connections to your computer, you should:

Email us at support@largan.com
Web: www.largan.com

Your LARGAN camera is backed by worldwide unlimited service and support.

US Office

Largan, Inc.
2432 W. Peoria Avenue
Bldg. 9, Suite 1165-1166
Phoenix, AZ 85029
Sales: 1-877-4LARGAN
Support: 1-877-4PIXELS
Fax: 1-602-944-6226
Email: support@largan.com
sales@largan.com
Web: www.largan.com

Head Office

Largan Digital Co., Ltd.
22F, No.123, Sec. 3,
Taichung Harbor Road,
Taichung City, Taiwan
Tel:886-4-23584455
Fax:886-4-23584465
Email: digital@largan.com.tw
Web: www.largan.com.tw

Frequently Asked Questions

Q: I've correctly installed the software, connected my camera to my PC, but get a flashing busy light or nothing at all. What does this mean?

A:

Step 1 Double-click on **My Computer** which is located on your desktop.

Step 2 Double-click on the **Control Panel** folder.

Step 3 Double-click on the **System** icon. This is usually located near the bottom of the window. You will now be at the System Properties window.

Step 4 Click on the second tab, **Device Manager**. Here we are looking for two things. About 5 icons down, you should see an icon labeled "**Imaging**".

Step 5 Click on the **plus (+)** sign located to the left of Imaging to open it.

Step 6 Further down the list, look for an icon that says"**Universal Host Controller**" . If you do not find an icon, contact your PC manufacturer, as the USB port will need to be enabled in the BIOS section of your computer.

Step 7 With the camera installed, there will be a listing matching the description of the mode of the camera, i.e., chameleon Mega Digital Camera and chameleon Mega Video Camera . If the icons are marked in red or any other color, the driver is not installed properly.

Step 8 Reinstall the driver.

Step 9 Restart your computer.

If this is not successful, call our tech support line at, **877-474-9357**, or email **support@largan.com**. Be sure to include a telephone number in your message so we can contact you.

Q: How do I delete the photos from my camera once they have been downloaded?

A:

Step 1 Press the **Mode/Power** button until you see the " " icon appears in the menu panel.

Step 2 Press and hold the **Shutter** button down for 3 seconds. Notice how the menu panel displays zero (0) photos.

Q: How do I save my photos to my computer from the camera?

A:

After following the " **Downloading Photos**" section on page 21 , you will receive the thumbnail image which is a visual representation of all photos in the camera. These are not actual photos.

Step 1 Click on the **SelectAll** button. This will highlight all of the photos in the thumbnail viewer.

Note: To select individual photos. Once you have selected the photos, you are ready to transfer them.

Step 2 Click on the **Save** button located at the right of the thumbnail viewer.

Step 3 Type in the file name and click on **Save**.

Step 4 The photo has been stored in the computer.

Step 5 Click on the **Exit** button when you have finished downloading your photos.

From here, you can now manipulate (edit, crop, print, touchup, etc.) your photos.

Q: How do I turn on the camera without the beep sound ?

A:

Step 1 Make sure the batteries are properly inserted into the camera.

Step 2 By holding **Select** ▲ button first then press **Mode/Power** button to turn on the camera.

Q: How do I turn off the beep sound in the camera ?

A:

Step 1 Make sure the batteries are properly inserted into the camera.

Step 2 Press the **Mode/Power** button. The camera will beep.

Step 3 By holding **Select** ▲ and **Select** ▼ button 2 seconds, you can switch between silent and sound mode.

Q: In the TV mode, how do I switch NTSC to PAL system in the camera ?

A:

Step 1 Make sure the batteries are properly inserted into the camera.

Step 2 Press the **Mode/Power** button. The camera will beep.

Step 3 You must insert the TV cable in the camera and television.

Step 4 Press the **Mode/Power** button 4 times until the icon" NTSC " appears in the menu.

Step 5 By pressing ⚡/⏲ button under 2 seconds , you can switch " NTSC" to " PAL" system.

Q: How do I remove the tripod from the camera?

A:

Hold onto the tripod as picture below. Use force, press and turn the tripod (towards you) to remove the tripod.

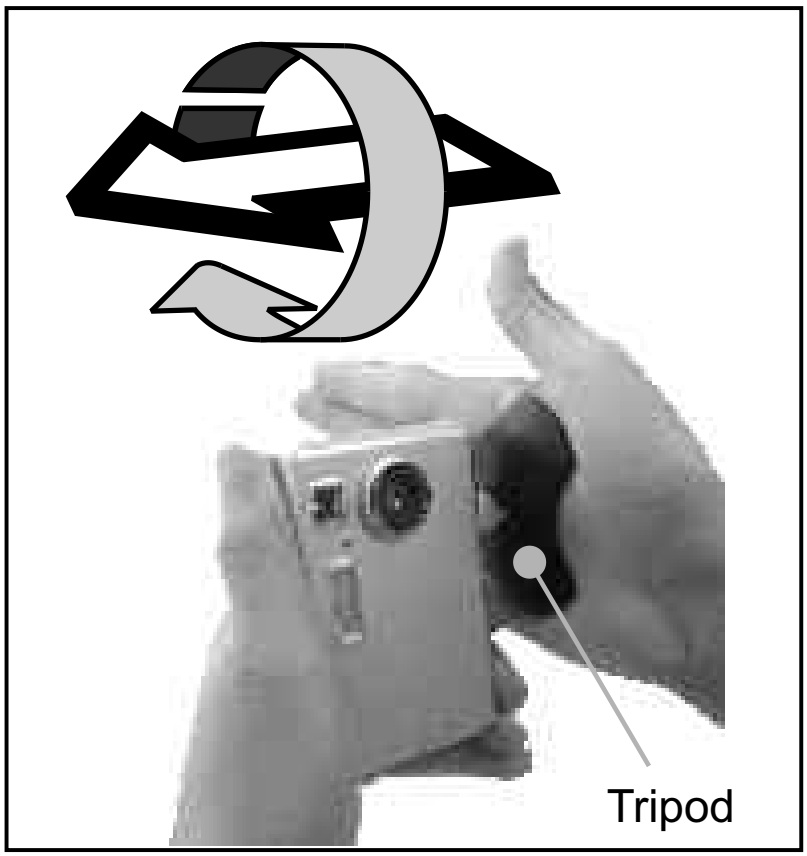

Q: In the process of use, when the LCD control panel displays either E1 or E2 or E3 signal, what do I do?

A:

When this happens, remove the battery and put them back in, then turn on the power again. If the signal continues to be displayed, please contact Largan Customer Services.

Additional Information

System Requirements

Windows 98/ME/2000/XP
A Pentium MMX and above
CD-ROM drive
200 MB hard drive space
64 MB RAM or more
USB port

Technical Specifications

Image resolution: Max: 1280 x 1024
Min: 160 x 120
24- bit true color
Storage Media: On board 16 MB Flash memory
Flash modes: auto-flash/off
Self-timer: 10 second delay
Focus: 8 inch (0.2 m) macro mode / 4ft (1.2m) to infinity from camera
Electronic shutter: 1/2 ~1/10000 sec.
Can delete all or last picture
Use 2 AAA alkaline batteries as power source
Interface: USB
chameleon Mega will automatically power off if inactive for more than 1 minute.

Suggestion of use:

1.Under suitable lighting modes of photographing:
- 1.1 Single shot (Auto Flash Mode) / Most suitable lighting environment are: Indoors/darkroom/office/outdoors
- 1.2 Single shot (Flash Off) / Most suitable lighting environment are: Indoors/outdoors/office
- 1.3 AVI photography and sequential photography; most suitable lighting environment: office, outdoors

* The range of the optimum average light source: Ev6~Ev17

2. Best distance with flash capturing :1.5M

Maintenance and Storage

Usage environment /temperature: 0 to 40 degrees Celsius

Usage environment/relative humidity:45% ~80%

Do not use or store this camera in environments of direct sunlight, high humidity and dusty places, next to air conditioner, electric heater or other heat sources, in a closed car that is in direct sunlight, and avoid shaky places.

If this camera becomes wet, wipe it with a dry cloth as soon as possible.

Salt or seawater may cause severe camera damage.

Do not use organic solvents, such as alcohol, to clean the camera.

If the lens or viewfinder are dirty, use a lens brush or soft cloth. Never use your fingers.

To prevent electrical shock, do not attempt to disassemble or repair the camera. Water may cause fire or electric shock, please store in a dry place.

If a foreign substance or water gets in the camera, turn the power off and remove the batteries. If possible remove the foreign substance and send it to the maintenance center.

Transfer the data to your computer as soon as possible to avoid losing your images.

Warranty Card

For cameras purchased in the United States, in the event that your Largan product needs guarantee service, you should return it to the retailer from whom it was purchased. If you encounter any difficulties, contact Largan, Inc. for advice.

Your guarantee

By this Consumer Guarantee, Largan, Inc. ("Largan") guarantees this product to be free of defects in materials and workmanship at the time of its original purchase by the consumer from the retailer for a period of one year. If during this period of guarantee the product proves defective due to improper materials or workmanship, the Retailer or Largan's appointed service agent will, without charge for labor or parts repair, or in its sole discretion replace this product or its defective parts.

Conditions

Service under the guarantee will be granted only if the original invoice/ receipt from the retailer to the consumer is presented showing (a) the purchaser's name, (b) the retailer's name, (c) the model number and serial number, (d) the date of purchase. Largan reserves the right to refuse guarantee service if this information has been removed or changed after the original purchase of the product by the consumer from the retailer.

This product will never be considered defective in materials or workmanship if it needs to be adapted, changes or adjusted to conform to the national or local technical or safety standards in force in any country other than the one for which the product was originally designed and manufactured. This product will never be considered defective in materials or workmanship if it needs to be adapted, changed or adjusted, in order to be used in conjunction with software or hardware other than that with which the product was originally designed and manufactured for.

Warranty Card (continued)

This guarantee covers none of the following (a) periodic checkups, maintenance and repair of replacement of parts due to normal wear and tear, (b) carriage costs, (c) damage to the product resulting from abuse and misuse (including but not limited to a failure to use this product for its normal purposes or in accordance with the instructions and the installation or use of this product in a manner inconsistent with the technical or safety standards in force where the product is used), repairs performed by persons other than Largan or Largan's appointed agents, accidents, acts of God or any cause beyond the control of Largan including but not limited to lightning, water, fire, public disturbances.

Application Software supplied with the camera is supplied to you under license from copyright holder. This guarantee does not extend to Application Software.

This guarantee does not affect the consumer's statutory rights under applicable national legislation in force nor arising from the consumer's rights against the retailer arising from their sales/purchase contract. In the absence of applicable and exclusive remedy and Largan shall not be liable for any incidental or consequential damages for breach of any express or implied guarantee of this product.

MEMO

MEMO

MEMO

MEMO

MEMO

LARGAN Inc.

2432 W. Peoria Avenue Bldg. 9, Suite 1165-1166 Phoenix, AZ 85029
Sales: 1-877-4LARGAN Support: 1-877-4PIXELS
Fax: 1-602-944-6226
Email: sales@largan.com Support@largan.com
Website: www.largan.com

1-628-13-0001-02